

Foot Vise

■Important

For your own safety and effective operation, read this instruction manual carefully and completely before use. Failure to understand and follow the contents of this manual may result in serious personal injury or death.

⚠ WARNING

Read carefully before start using. Otherwise serious injury may be caused.
This is a portable pipe vise and designed for gripping a pipe or nipple on the ground.
Never apply an extension bar or pipe for leverage.
Set a wrench straight and confirm the firm grip before turning. Otherwise it may slip and cause serious injury.
Keep your working space clear and large enough for your step. If slip, unexpected accident or injury may be caused.
Cancer and Reproductive Harm- www.P65Warnings.ca.gov

⚠ CAUTION

Always check the materials and capacity to be used. Never attempt on any materials except specified.
Always keep the moving parts on your Foot Vise are well lubricated.
Always check the condition of Foot Vise and never use it if it's damaged or worn out.

■Specification

Maximum torque can be applied on the handle:


Item No	Cap Outer Dia.(Pipe size)	Size/Weight
FV-0110	40mm (1/2 – 1.1/4")	390mm/2.8kg
FV-0120	63mm (1.1/4 – 2")	460mm/5.5kg
FV-0130	165mm (1.1/2 – 6")	360mm/6.5kg

■How to Use

For FV-0110 & FV-0112


How to set a pipe

Insert a pipe all the way to the bottom turning it in the direction of arrow.

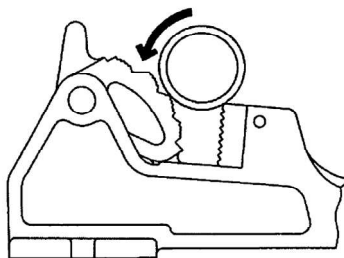


How to release a pipe

By turning a pipe in the direction of "No Grip" arrow, pipe can be released. When a pipe is stuck, hit a lever "A" by plastic hammer.

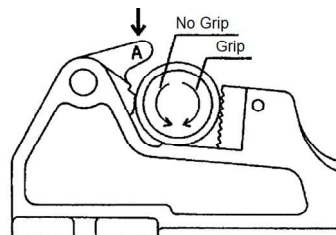


How to tighten a fitting on a pipe

Set a fitting on your left side(; see image below) and put your step on a pedal pipe, then turn a fitting.

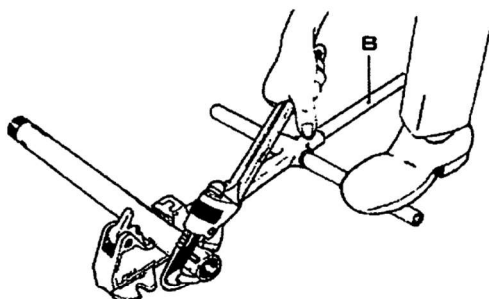

How to loosen a fitting on a pipe

Set a fitting with a pipe on your right side(; see image below) and put your step on a pedal pipe, then turn a fitting.

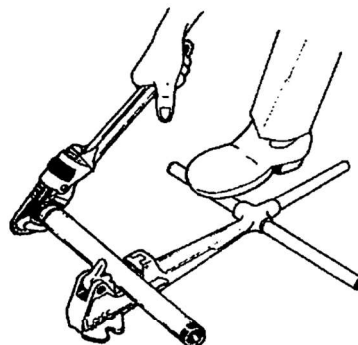


For FV-0130


How to set a pipe

Loosen Knob all the way.

Turning a pipe in a direction of "No Grip", push a pipe towards pipe jaw and keep it.

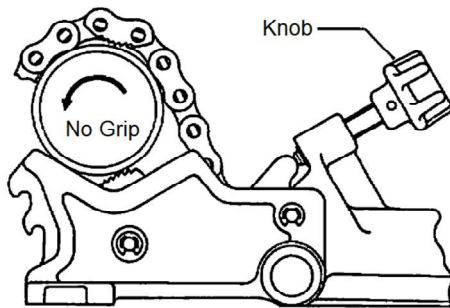


Then, secure Chain and tighten Knob as possible for form grip.

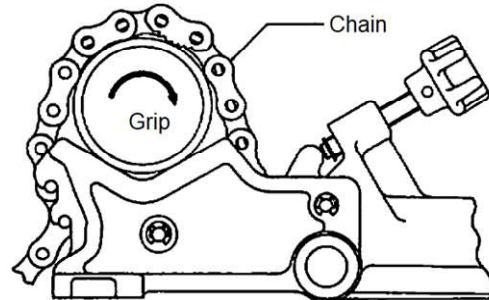


How to tighten a fitting on a pipe

Set a fitting on your left side(; see image below) and put your step on a pedal pipe, then turn a fitting.

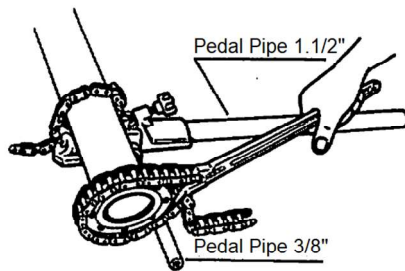

How to loosen a fitting on a pipe

Set a fitting with a pipe on your right side(; see image below) and put your step on a pedal pipe, then turn a fitting.

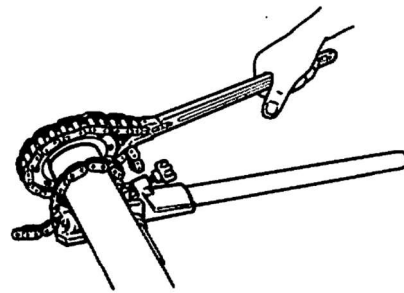

MCC Corporation – Main factory
1814 Takachayakomoricho Tsu-city, Mie 514-0817 JAPAN

MCC International Inc. - International Sale Office
Sanko Bldg. Room 507, 3-9, 1-Chome, Minamihonmachi, Chuo-Ku, Osaka, 541-0054, Japan
E-mail: Info@mccinter.com

MCC USA Inc. - US Sales Office/Warehouse
3715 Market St STE 109 Glendale, CA 91208
Web: www.mccusainc.com, E-mail: info@mccusainc.com

Ver. 190220